

OVERVIEW

For use with the LA500 gate operator. The solar harness is required for 33AH solar applications ONLY. Refer to the manual for complete wiring instructions.

CARTON INVENTORY

- Jumper wire for batteries
- Solar harness (long red and black wires for 33AH battery connections and short red and black wires for the solar panel connections)

WARNING

To reduce the risk of SEVERE INJURY or DEATH:

- ANY maintenance to the operator or in the area near the operator MUST NOT be performed until disconnecting the electrical power (AC or solar and battery) and locking-out the power via the operator power switch. Upon completion of maintenance the area MUST be cleared and secured, at that time the unit may be returned to service.
- ALL electrical connections MUST be made by a qualified individual.

LA500 CONNECTIONS

SOLAR APPLICATION

Disconnect all power (AC, solar, battery) to the operator before servicing.

NOTE: 10W 12V solar panels are illustrated in the image below.

