

DISCONNECT ASSEMBLY REPLACEMENT KIT FOR MJ OPERATORS

K75-33972

APPLICATION

Replacement of Disconnect Assembly and/or its components for a Model MJ Operator.

CARTON INVENTORY

ITEM	DESCRIPTION	QUANTITY
1	Disconnect Support Bracket	1
2	Yoke	1
3	Disconnect Lever	1
4	Disconnect Shaft	1
5	Tension Spring	1
6	Sash Chain, 12 Feet	1
7	Screw, 1/4-20 x 3/4" Hex Head	2
8	Screw, #10-32 x 3/4" Socket HH	2
9	Nut, #10-32 Serrated Flange	2
10	Jam Nut, #1/4-20 Hex	2
11	Cotterpin 1/8 x 1-3/4" Long (ZP)	1
12	Cotterpin 5/32 x 1-1/2" Long	1
13	Rollpin 1/8 x 1" Long	1

INSTALLATION

1. Close door and secure.
2. Disconnect power to the operator.
3. Remove the drive chain from the operator to the door.
4. Remove operator from its location.
5. Refer to the owner's manual provided with the operator for all mounting and wiring instructions.
6. Reset limits after the operator is reinstalled.
7. Reapply power to operator.
8. Test all safety equipment (if applicable) for proper functionality.

⚠️ ⚠️ WARNING

To reduce the risk of **SERIOUS INJURY** or **DEATH**:

- Disconnect electric power at the fuse box **BEFORE** proceeding.
- **ALL** electrical connections **MUST** be made by a trained door systems technician.

