RESET SWITCH MODEL K76-33672

APPLICATION

This kit is required for HCT operators which have been upgraded to revision ${\sf E}$ software.

FUNCTION

The reset switch allows the HCT to clear a back to back close entrapment input.

OPERATION

If an HCT reverses from a close entrapment sense twice before completing a close attempt, the operator will remain at full open until a reset is made per UL 325. This reset switch provides the required input and should be mounted within sight of the gate opening.

INSTALLATION

- 1. Disconnect power to operator.
- 2. Mount reset switch within sight of the gate opening, a minimum of 6' from gate jambs (Figure 1)..
- 3. Remove the cover from the operator.
- 4. Plug the interface cable (Figure 2) into J5 on the Omni board (Figure 3).
- 5. Connect like wires from the interface cable to the reset switch. Twist together with wire nuts.

NOTE: The wire connecting the interface cable to the reset switch is not provided.

6. Reconnect power to operator.

A WARNING

To prevent possible SERIOUS INJURY or DEATH from electrocution, disconnect electric power to operator BEFORE installing.


ALL electrical connections MUST be made by a qualified individual.



WARNING: This product can expose you to chemicals including lead, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to *www.P65Warnings.ca.gov*

CARTON INVENTORY	
DESCRIPTION	QTY
Reset Switch	1
Wire Nuts	2
Interface Cable	1

FIGURE 1

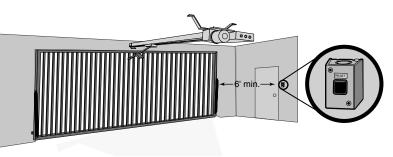




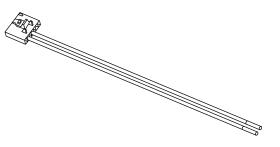


FIGURE 3

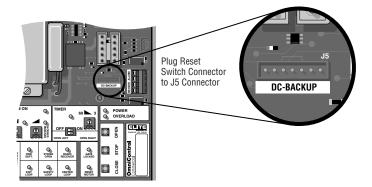

www.SimpleGateOpener.com | (888) 378-1618 | Sales@SimpleGateOpener.com