



GARAGE DOOR OPENER — REPAIR + SERVICE PARTS

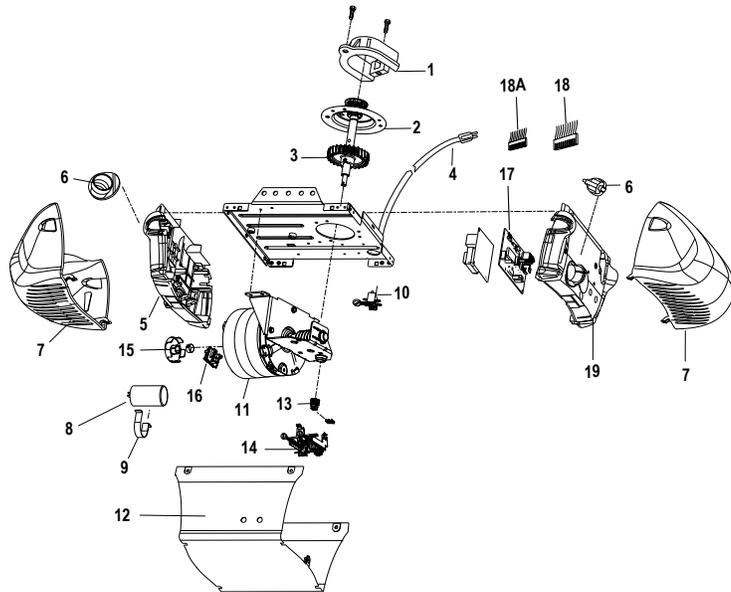

KEY#	PART#	DESCRIPTION
1	041A4371	BELT CAP RETAINER
2	041A4885-5	BELT DRIVE GEAR AND SPROCKET KIT
3	041A2817	DRIVE GEAR AND WORM KIT
4	041B4245-1	AC POWER CORD, 6'
5	041A5484	END PANEL
6	041C0279	LIGHT SOCKET KIT
7	K108D0079M	LIGHT LENS
8	K030B0532-1	CAPACITOR, 56UF, 220V
9	K012A0373	CAPACITOR BRACKET
10	041A3150	TERMINAL BLOCK KIT
11	041C4842	MOTOR AND BRACKET KIT
12	041A5525-3	COVER
13	041A2818	LIMIT SWITCH DRIVE GEAR KIT
14	041D3452	LIMIT SWITCH KIT
15	041A2822-1	INTERRUPTER CUP
16	041C4398A	RPM SENSOR KIT
17	041A5483-4C	RECEIVER LOGIC BOARD, 390MHZ
18	041C5830	WIRE HARNESS KIT, HIGH VOLTAGE
18A	041C5548	WIRE HARNESS KIT, LOW VOLTAGE
19	041D0180-1	END PANEL
	NOT SHOWN IN DIAGRAM	
	041B0139	ISOLATOR SPACER KIT


INSTALLATION — ASSEMBLY + SERVICE PARTS

KEY#	PART#	DESCRIPTION
1	004A1008	CHAIN, #48, WITH ML
2	041B5424	BELT PULLEY BRACKET KIT
3	041B3869-3A	BELT DRIVE TROLLEY KIT
4	K109B0033	LINK CONNECTOR
5	G2777	BELT DRIVE RAIL ASSEMBLY, 1 PC, 7'
	G2778	BELT DRIVE RAIL ASSEMBLY, 1 PC, 8'
	G2770	BELT DRIVE RAIL ASSEMBLY, 1 PC, 10'
6	041A5434-11A	BELT KIT, 7'
	041A5434-13A	BELT KIT, 8'
	041A5434-14A	BELT KIT, 10'
7	041B4103	BELT TENSIONER KIT
	NOT SHOWN IN DIAGRAM	
	K083A0011-1	LITHIUM RAIL GREASE
	041A6689	THREADED SHAFT, D SHAPE

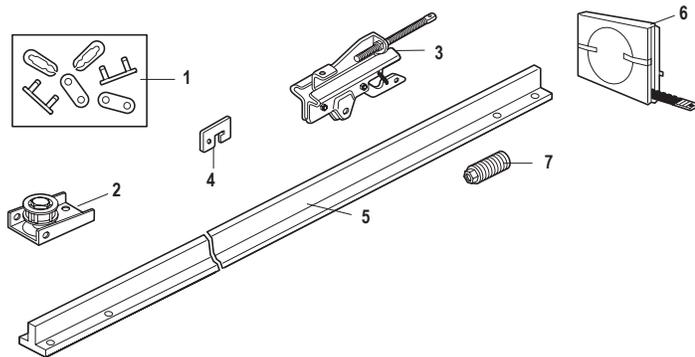

RAIL INSTALLATION — ASSEMBLY + SERVICE PARTS

KEY#	PART#	DESCRIPTION
1	041A5273-1	WALL-MOUNTED DOOR CONTROL PANEL
2	973LM	3 BUTTON REMOTE CONTROL
3	K010A0020	3V CR2032 LITHIUM BATTERY
4	K029B0137	REMOTE CONTROL VISOR CLIP
5	041A2828	EMERGENCY MANUAL RELEASE ROPE
6	041B4494-1	WHITE/RED BELL WIRE
7	041A5047-1	DOOR BRACKET
8	041A4353	HEADER BRACKET
9	041-0136	SAFETY SENSOR KIT
10	4178B0034B	STRAIGHT DOOR ARM
11	041B0035B	CURVED DOOR ARM
12	041-0155-000	SAFETY SENSOR BRACKET KIT
	NOT SHOWN IN DIAGRAM	
	041A2770-17	HARDWARE KIT

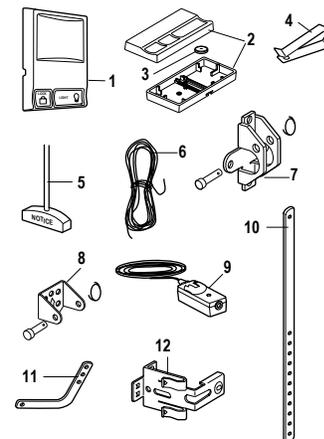

NOTE: Part numbers that are not highlighted are no longer available.

TIME TO UPGRADE? Visit partner.liftmaster.com