



GARAGE DOOR OPENER — REPAIR + SERVICE PARTS

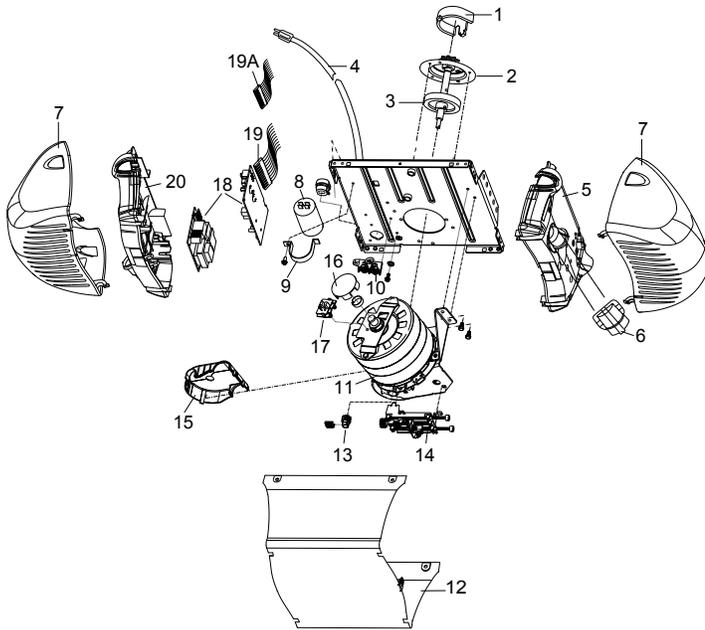

KEY#	PART#	DESCRIPTION
1	K031D0380M	SPROCKET COVER
2	041C4220A	CHAIN DRIVE GEAR AND SPROCKET KIT
3	041A2817	DRIVE GEAR AND WORM KIT
4	041B4245-1	AC POWER CORD, 6'
5	041A5484	END PANEL
6	041C0279	LIGHT SOCKET KIT
7	K108D0079M	LIGHT LENS
8	K030B0532-1	CAPACITOR, 56UF, 220V
9	K012A0373	CAPACITOR BRACKET
10	041A3150	TERMINAL BLOCK KIT
11	041C4842-2	MOTOR AND BRACKET KIT
12	041A5525-1	COVER
13	041A2818	LIMIT SWITCH DRIVE GEAR KIT
14	041D3452	LIMIT SWITCH KIT
15	041A5532	GEAR CASE KIT
16	041A2822-1	INTERRUPTER CUP
17	041C4398A	RPM SENSOR KIT
18	041A5483C	RECEIVER LOGIC BOARD, 390MHZ
19	041C5499	WIRE HARNESS KIT, HIGH VOLTAGE
19A	041C5500	WIRE HARNESS KIT, LOW VOLTAGE
20	041D0180-1	END PANEL


INSTALLATION — ASSEMBLY + SERVICE PARTS

KEY#	PART#	DESCRIPTION
1	004A1008	CHAIN, #48, WITH ML
2	041A4813	CHAIN PULLEY BRACKET
3	041A3489	TROLLEY ASSEMBLY
4	G1707	T-TRAIL ASSEMBLY FULL CHAIN, 7'
	G1708	T-TRAIL ASSEMBLY FULL CHAIN, 8'
	G1710	T-TRAIL ASSEMBLY FULL CHAIN, 10'
5	041D3484	CHAIN KIT, 7'
	041D3483	CHAIN KIT, 8'
	041D3485	CHAIN KIT, 10'
6	K083A0011-1	LITHIUM RAIL GREASE

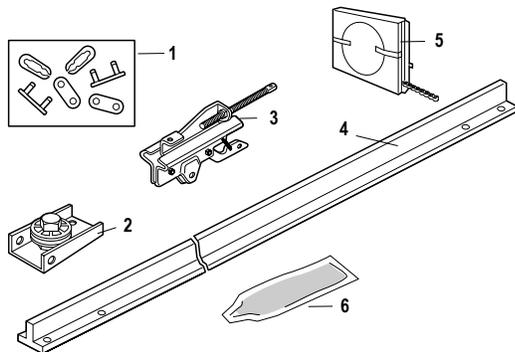

RAIL INSTALLATION — ASSEMBLY + SERVICE PARTS

KEY#	PART#	DESCRIPTION
1	98LM	WALL-MOUNTED DOOR CONTROL PANEL
2	973LM	3 BUTTON REMOTE CONTROL
3	K010A0020	3V CR2032 LITHIUM BATTERY
4	K029B0137	REMOTE CONTROL VISOR CLIP
5	041A2828	EMERGENCY MANUAL RELEASE ROPE
6	041B4494-1	WHITE/RED BELL WIRE
7	041A5047-1	DOOR BRACKET
8	041A4353	HEADER BRACKET
9	041-0136	SAFETY SENSOR KIT
10	4178B0034B	STRAIGHT DOOR ARM
11	041B0035B	CURVED DOOR ARM
12	041-0155-000	SAFETY SENSOR BRACKET KIT
	NOT SHOWN IN DIAGRAM	
	041A2770-17	HARDWARE KIT

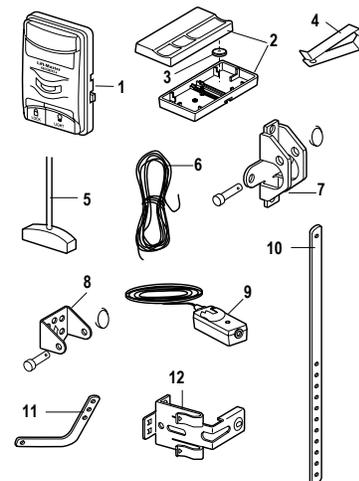

NOTE: Part numbers that are not highlighted are no longer available.

TIME TO UPGRADE? Visit partner.liftmaster.com